

104080" 9E6E2660





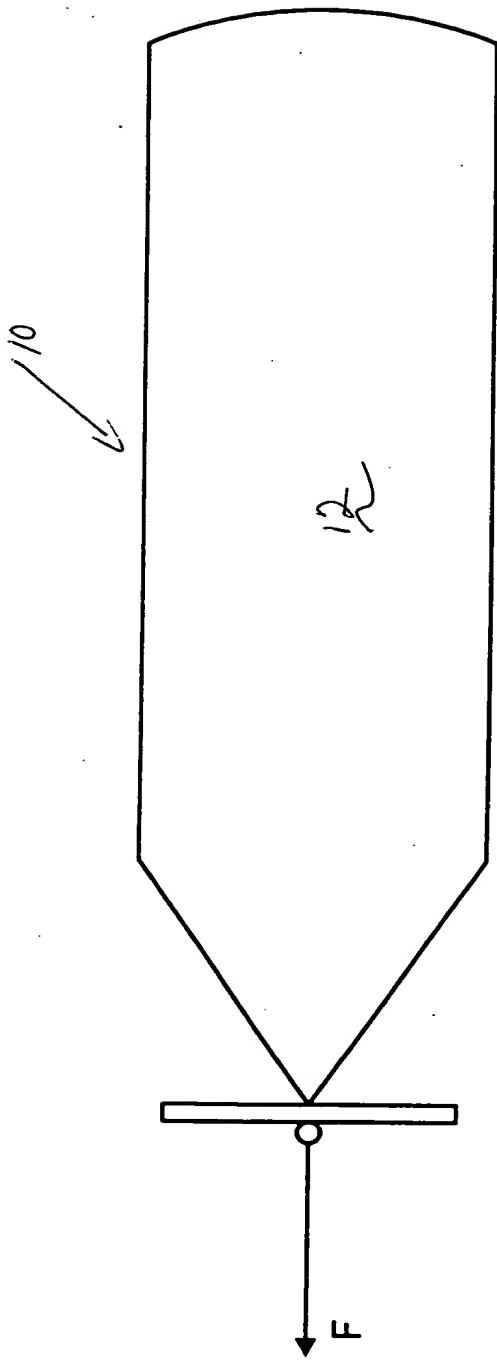


FIG. 1

# Typical 8 Harness Satin Double Cloth With Stitching Points

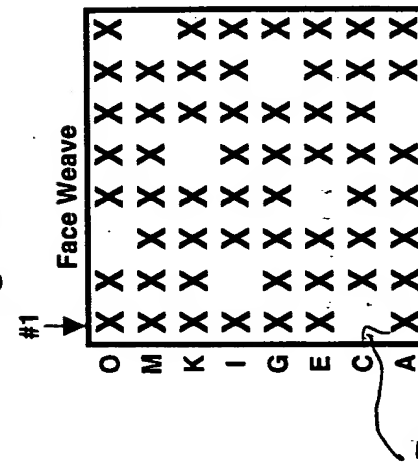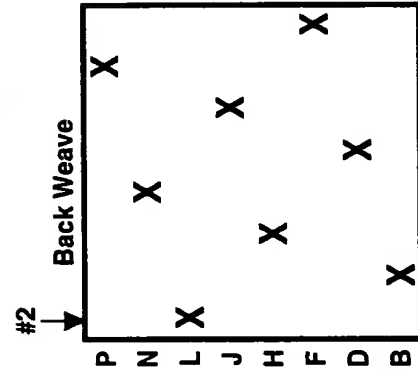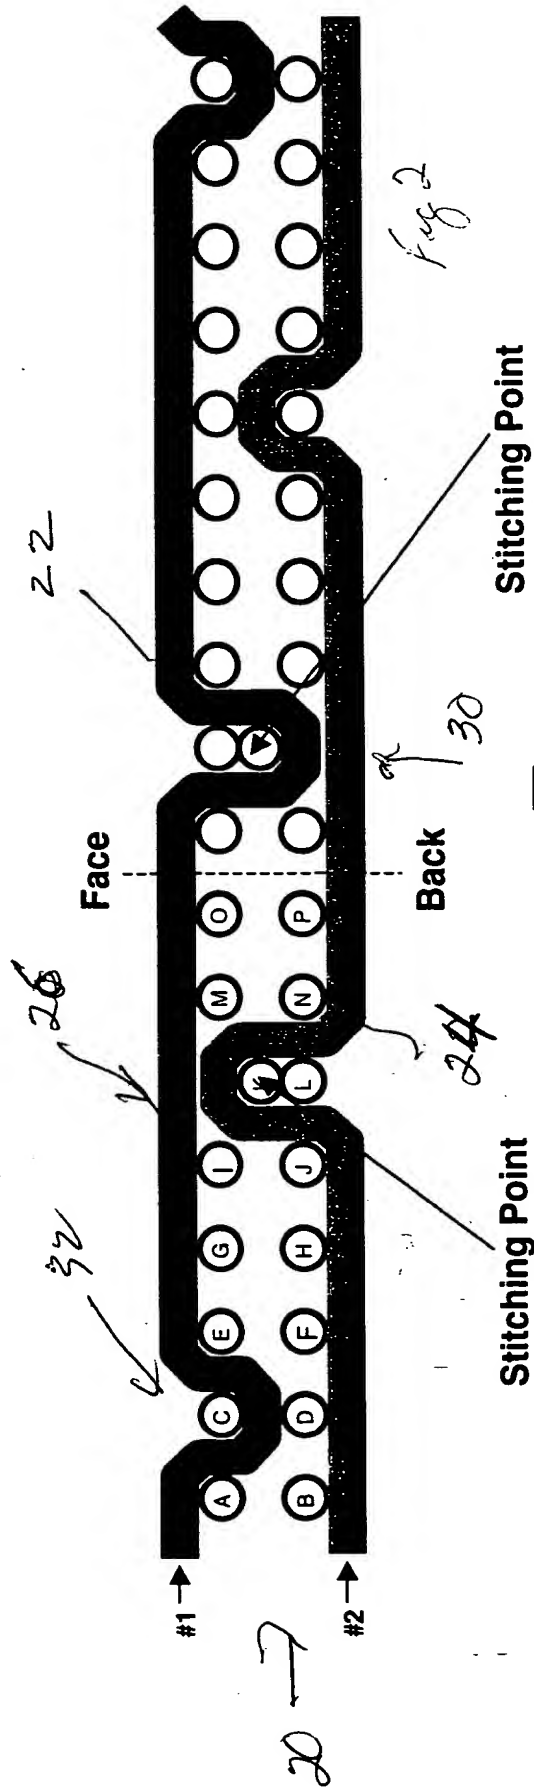

09923936-080701

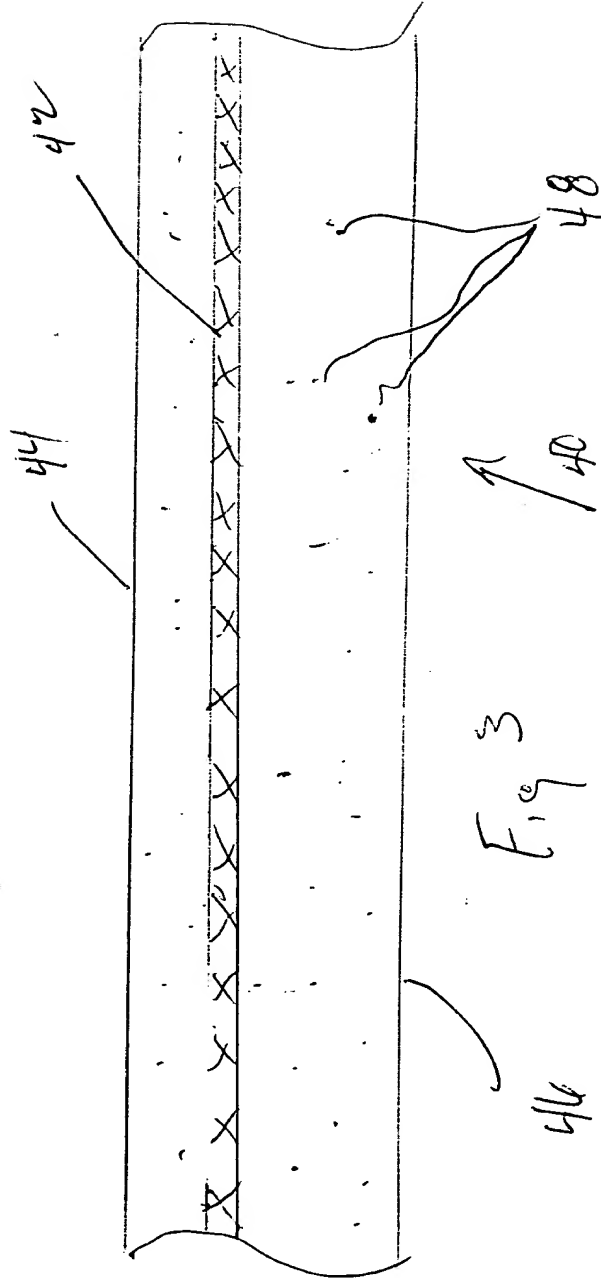

# Stress Strain Curves

## Comparison of Filled PU vs. Unfilled

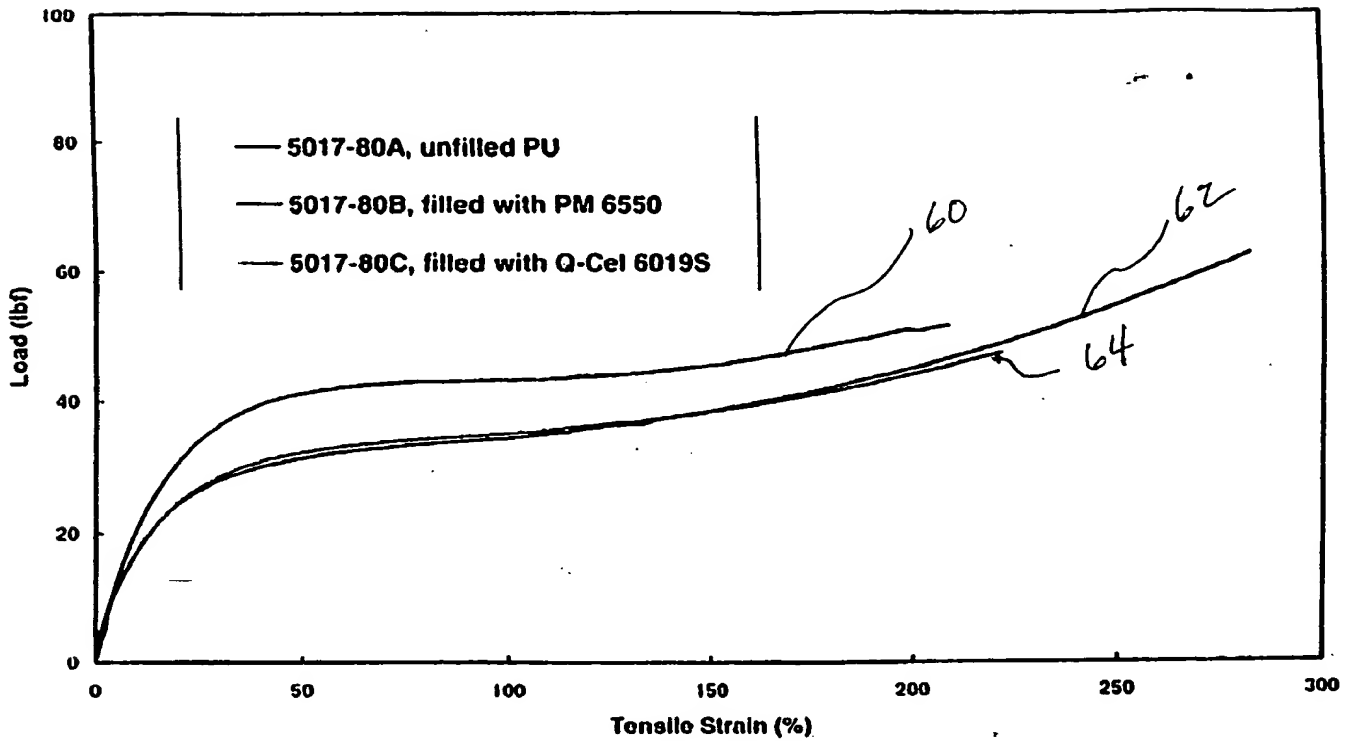


Figure - Stress - Strain Results

3A

✓  
T04080\* 9662660



Fig. 4

50

54

Fig 4A

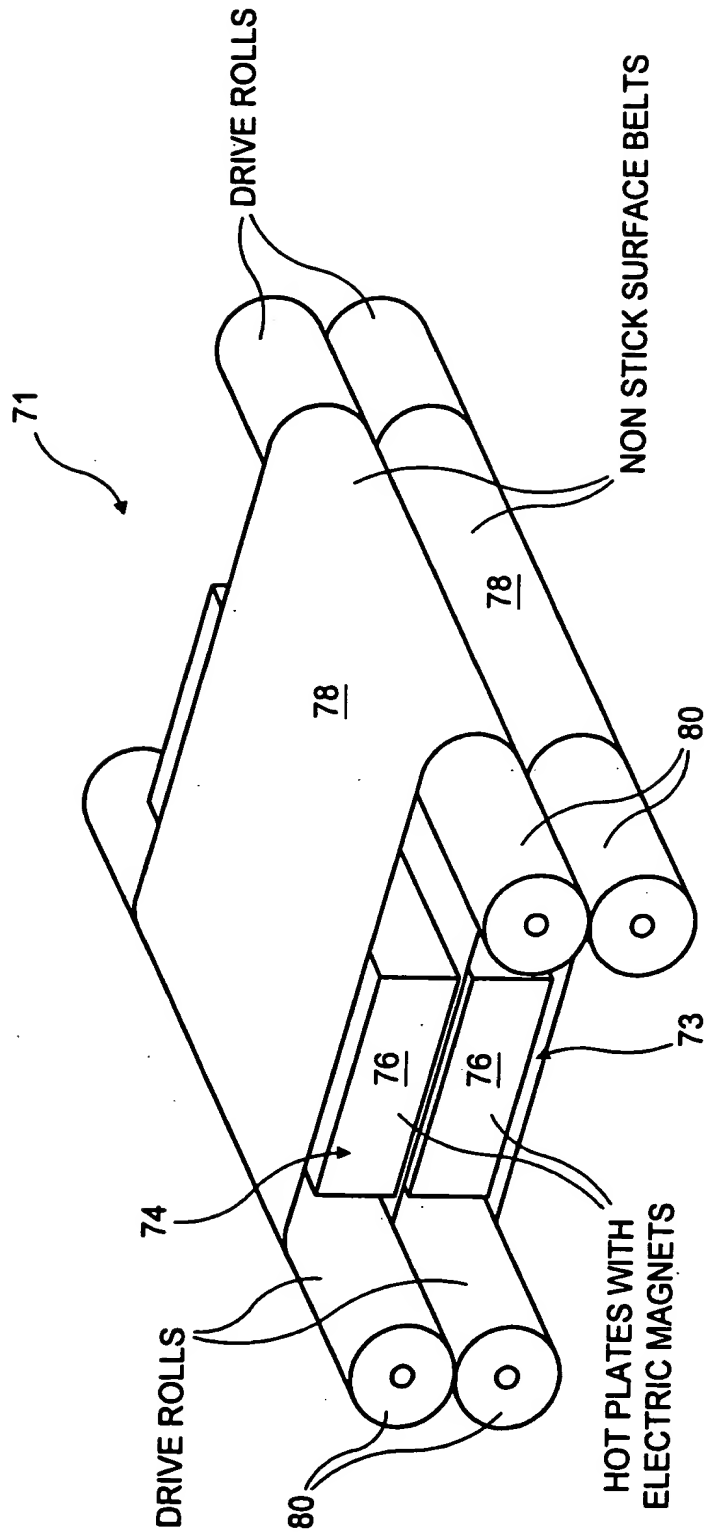


FIG. 1

FOZ080" 9E6E2660

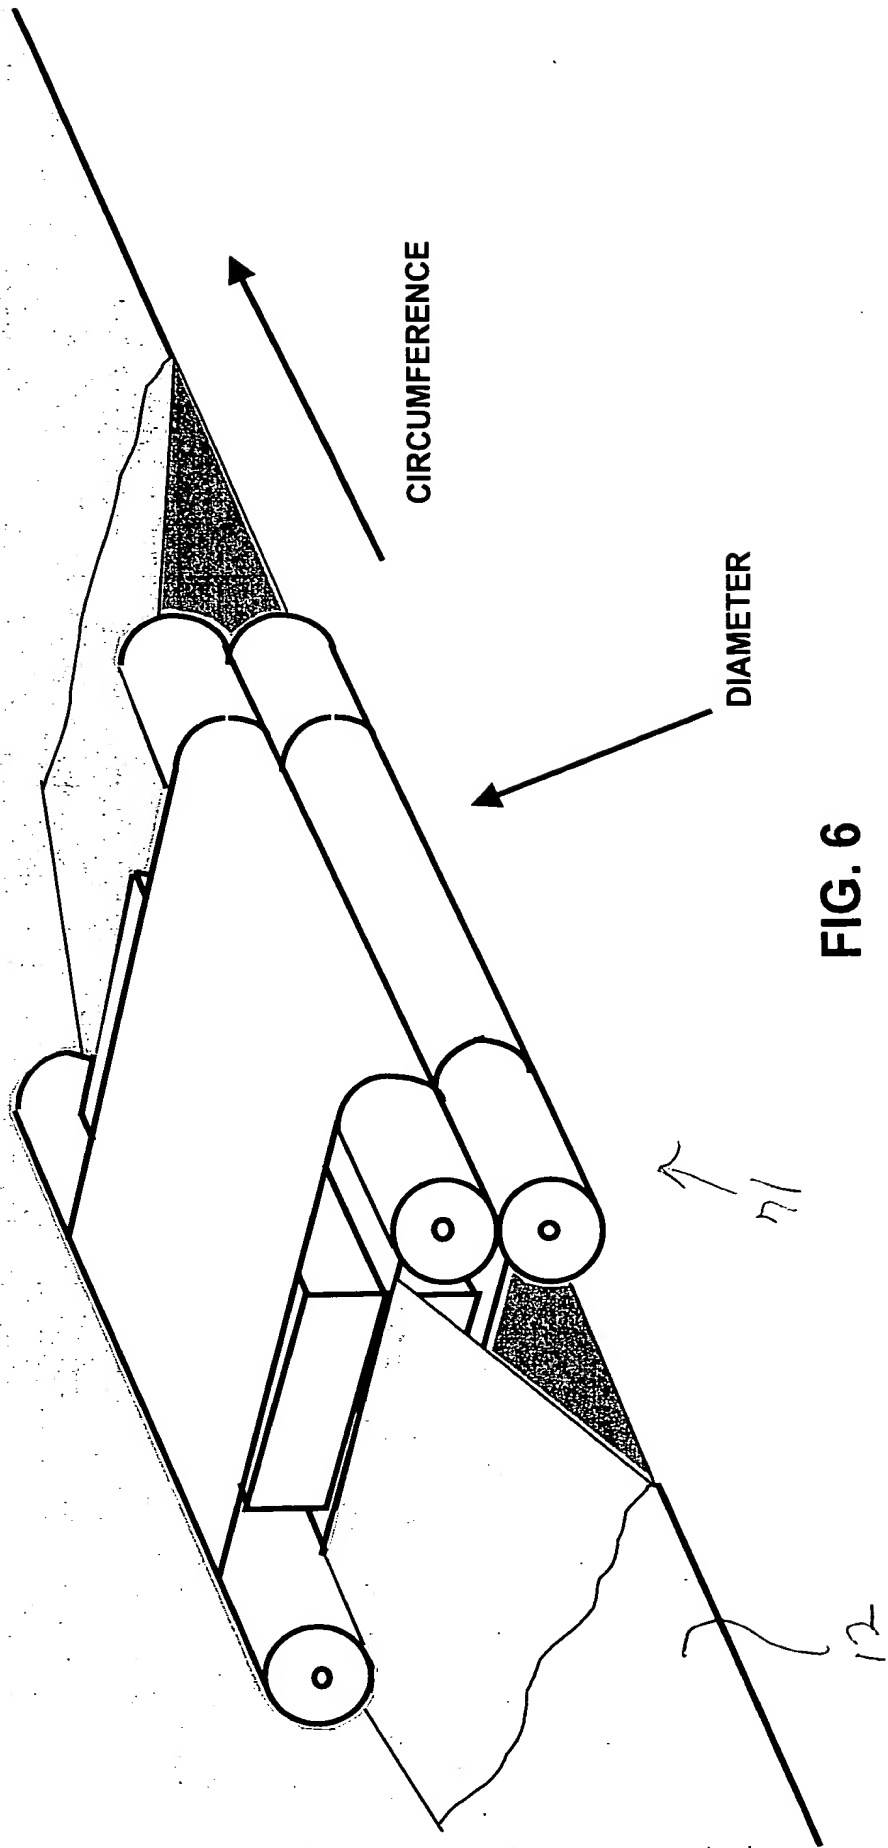


FIG. 6